

P-250

Quick Start Guide

OPTICON



- **Feedback** - beep sound and green LED by successful read
- **Scan window** - ensure it is free from dust and dirt

What is in the box

- P-250 Fixed Mount scanner
- Quick Start Guide

Set up your scanner

Find all settings and set up your scanner via opticonfigure.opticon.com or use the QR-Code:



Documentation

Documentation, drivers and software updates for the P-250 are available at: www.opticon.com

Opticon Sensors Europe BV
Opaallaan 35, 2132 XV
Hoofddorp, the Netherlands

OptiConfigure

Configure at OptiConfigure



[https://
opticonfigure.
opticon.com](https://opticonfigure.opticon.com)

Test barcodes

Code 128



Code 128

EAN 13



QR Code



Data Matrix



Connection Setup

USB Interface

Connect the USB to RJ50 accessory cable to the RJ50 Data port. Next, insert the USB plug into the USB port of your host device. Once connected, scan the barcode corresponding to the desired scanner settings.



USB VCP
(serial)



USB HID
(keyboard)
DEFAULT

RS-232 Interface

Connect the RS-232 to RJ50 accessory cable to the RJ50 Data port. Then, plug the RS-232 connector into the corresponding port on your host device. After the connection is established, scan the settings barcode to configure the scanner for serial mode.



RS232
(serial)

For information about your P-250, including detailed setup instructions, other modes, downloads and more, visit us at:

Opticon: opticon.com/products/P-250
Opticon USA: opticonusa.com